


# ULTRATEMP HXI HEAT PUMP

## REPLACEMENT PARTS

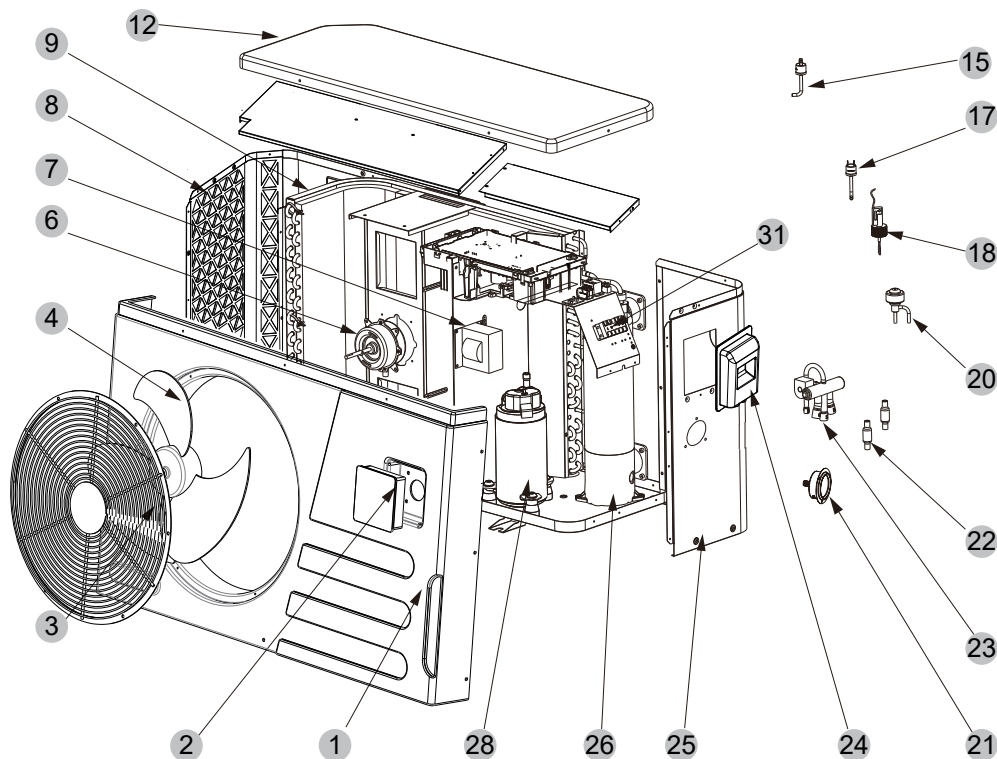

Item	Part No.	Description
ULTRATEMP HXI REPLACEMENT PARTS		
1	803195	Panel Front UTHP Hxi 7.5-12kW
1	803196	Panel Front UTHP Hxi 16kW
1	803197	Panel Front UTHP Hxi 20-20kW
2	803198	LCD UTHP Hxi
3	803199	Grill UTHP Hxi 7.5-12
3	803200	Grill UTHP Hxi 16-20kW
4	803201	Fan UTHP Hxi 7.5-12kW
4	803202	Fan UTHP Hxi 16-20kW
6	803203	Motor Fan UTHP Hxi 7.5-12kW
6	803204	Motor Fan UTHP Hxi 16-20kW
7	803205	Inductive Filter UTHP Hxi 7.5-12kW
7	803206	Inductive Filter UTHP Hxi 16-20kW
8	803207	Panel Rear UTHP Hxi 7.5-12kW
8	803208	Panel Rear UTHP Hxi 16kW
8	803209	Panel Rear UTHP Hxi 20-20kW
9	Call	Condenser
12	803213	Panel Top UTHP Hxi 7.5-12kW
12	803214	Panel Top UTHP Hxi 16kW
12	803215	Panel Top UTHP Hxi 20-20kW
15	803218	Low Pressure Switch UTHP Hxi
17	803220	High Pressure Switch UTHP Hxi
18	803221	Flow Switch UTHP Hxi

Item	Part No.	Description
20	803223	EEV UTHP Hxi 7.5-12kW
20	803224	EEV UTHP Hxi 16-24kW
21	Call	Pressure Gauge UTHP Hxi
22	Call	Filter
23	Call	Four-way valve
24	803228	Junction Box UTHP Hxi
25	803230	Panel Right UTHP Hxi 7.5-12kW
25	803231	Panel Right UTHP Hxi 16kW
25	803232	Panel Right UTHP Hxi 20-20kW
26	Call	Titanium tube heat exchanger
28	Call	Compressor
29	803236	PCB Inverter UTHP Hxi 7.5-12kW
30	803237	PCB Inverter UTHP Hxi 16-20kW
30	803238	Relay UTHP Hxi
31	803239	Terminal Block UTHP Hxi
32	803240	EMC Filter UTHP Hxi
33	803241	Temp Sensor Exhaust Gas UTHP Hxi
34	803242	Temp Sensor Suction Gas UTHP Hxi
35	803243	Temp Sensor Coil UTHP Hxi
36	803244	Temp Sensor Ambient UTHP Hxi
37	803245	Temp Sensor Water In UTHP Hxi
38	803246	Temp Sensor Water Out UTHP Hxi